


ALSE RF IMMUNITY

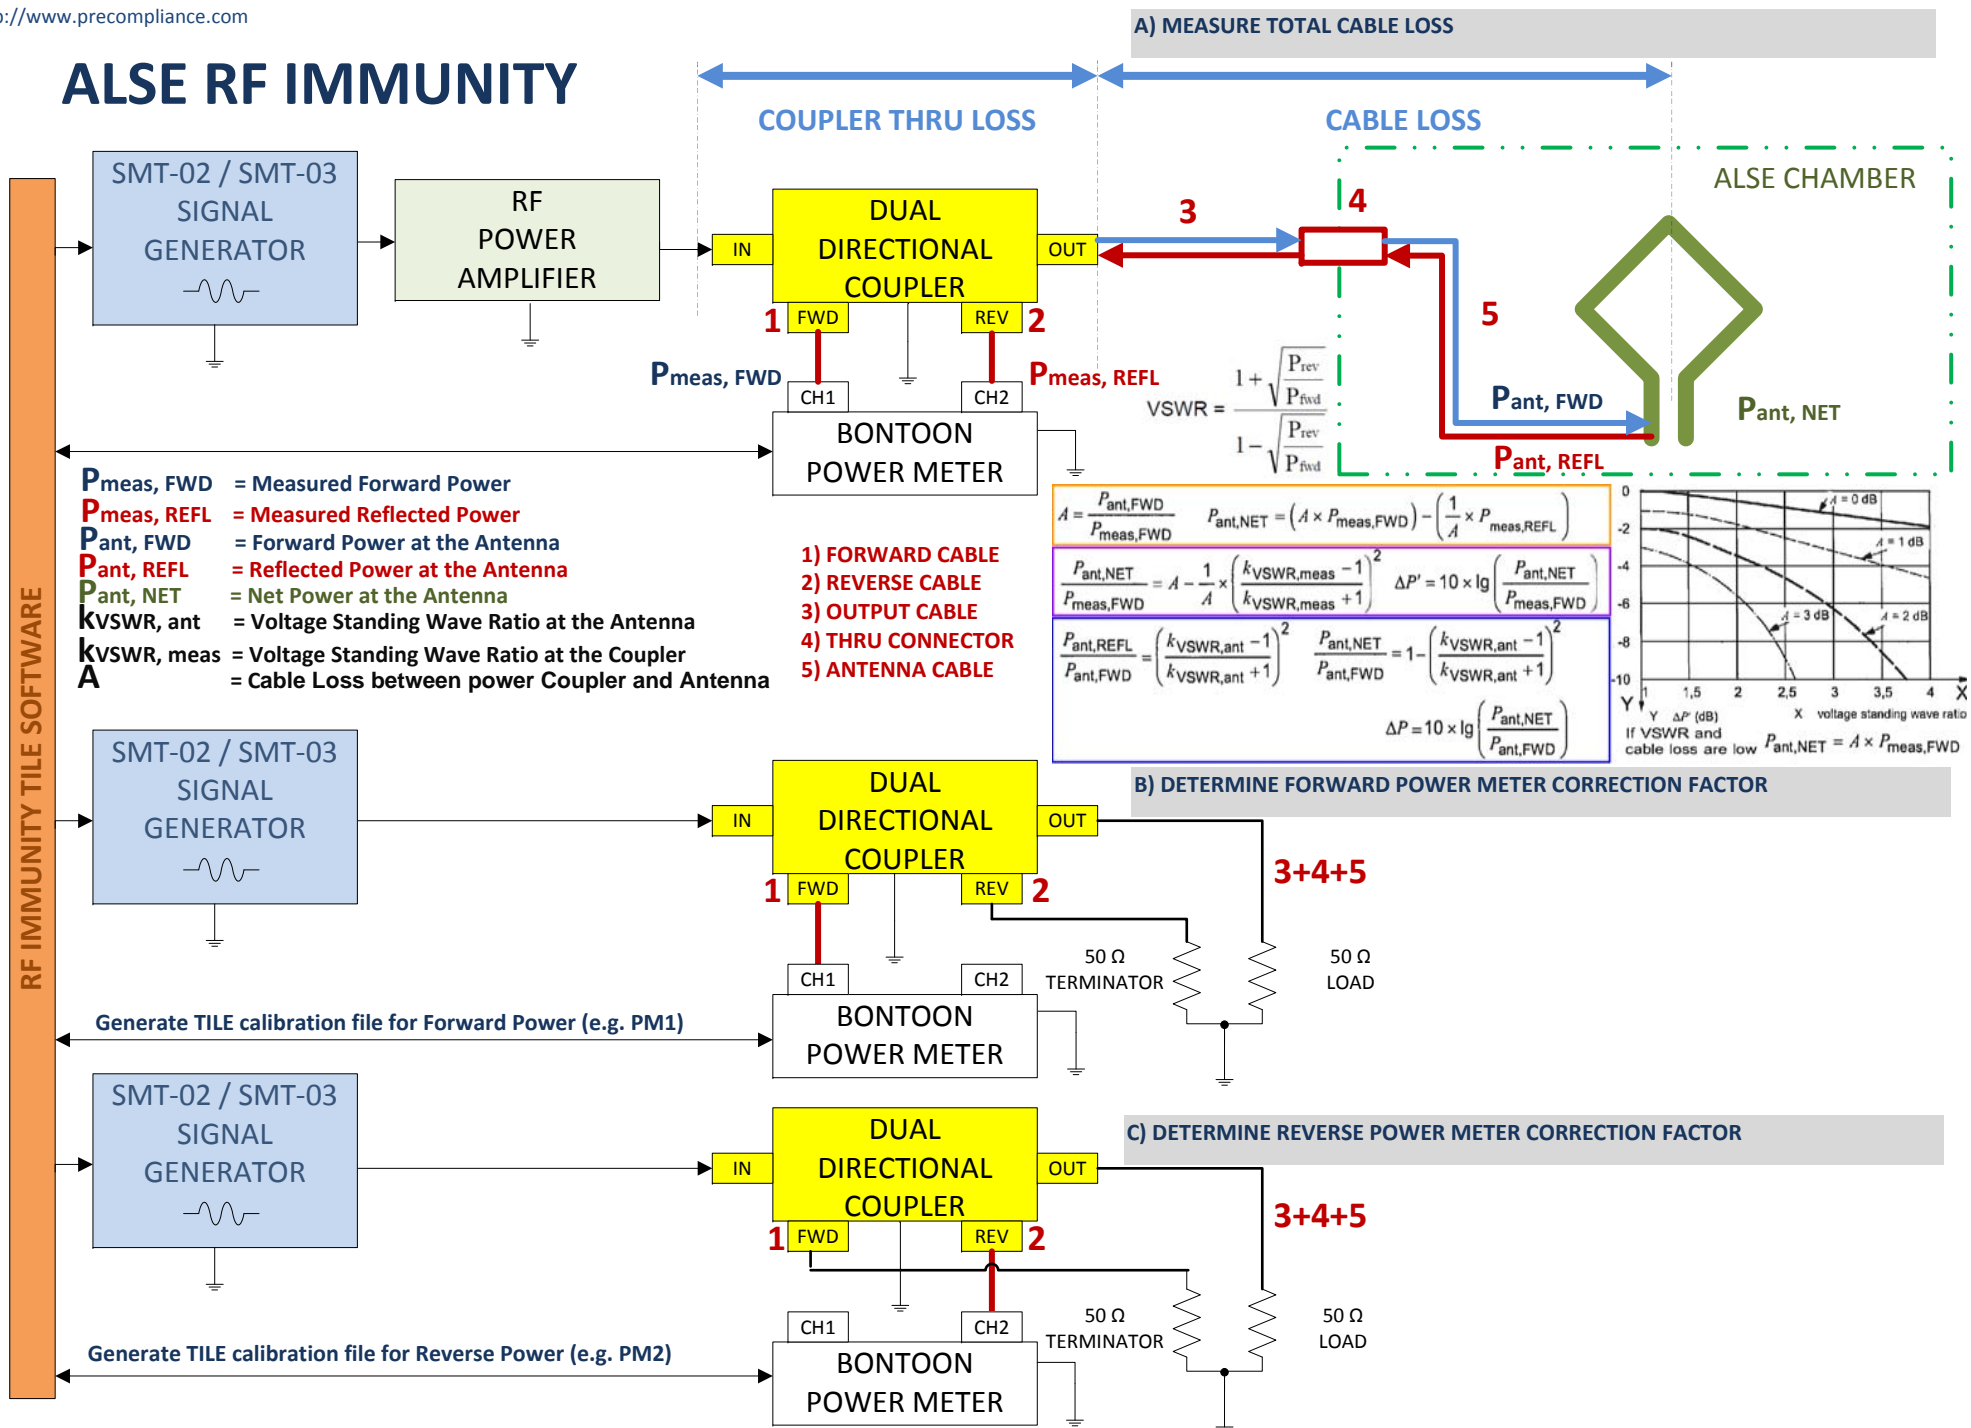

The above calibration procedure is required for all power meters and cables used to cover the entire test frequency range. Regardless to pulse modulation type used during the test, this calibration is done in CW (continuous wave). Tile software calibration files are to be used as part of ALSE RF Immunity filed calibration level (substitution method) procedure.